

CONCORDE


Installation instructions



SIZE: 90*90*200 CM


CONCORDE

Installation Instructions

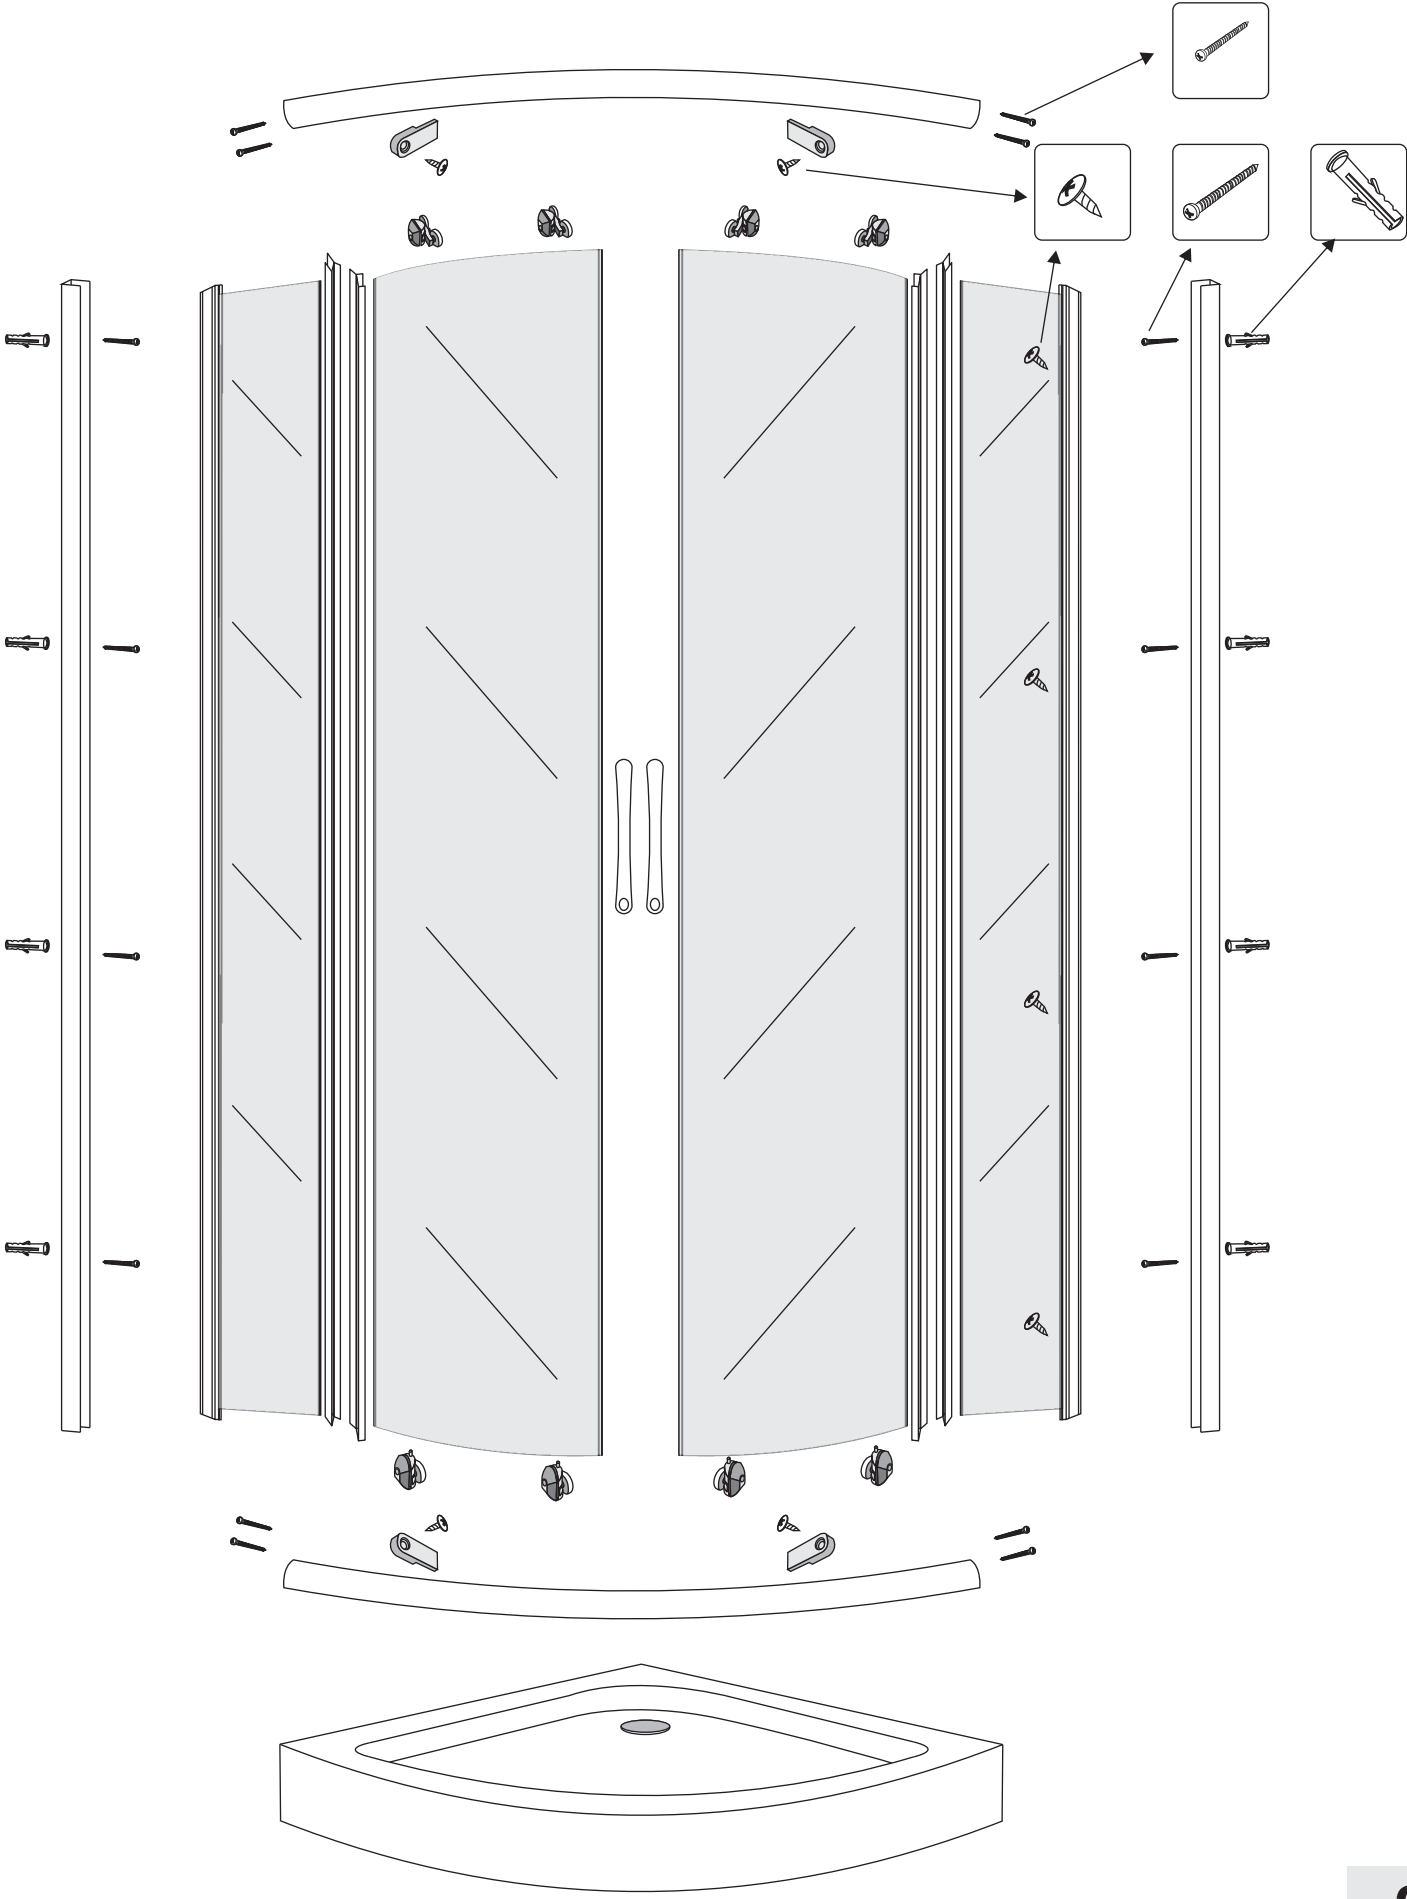


CONCORDE


Installation Instructions

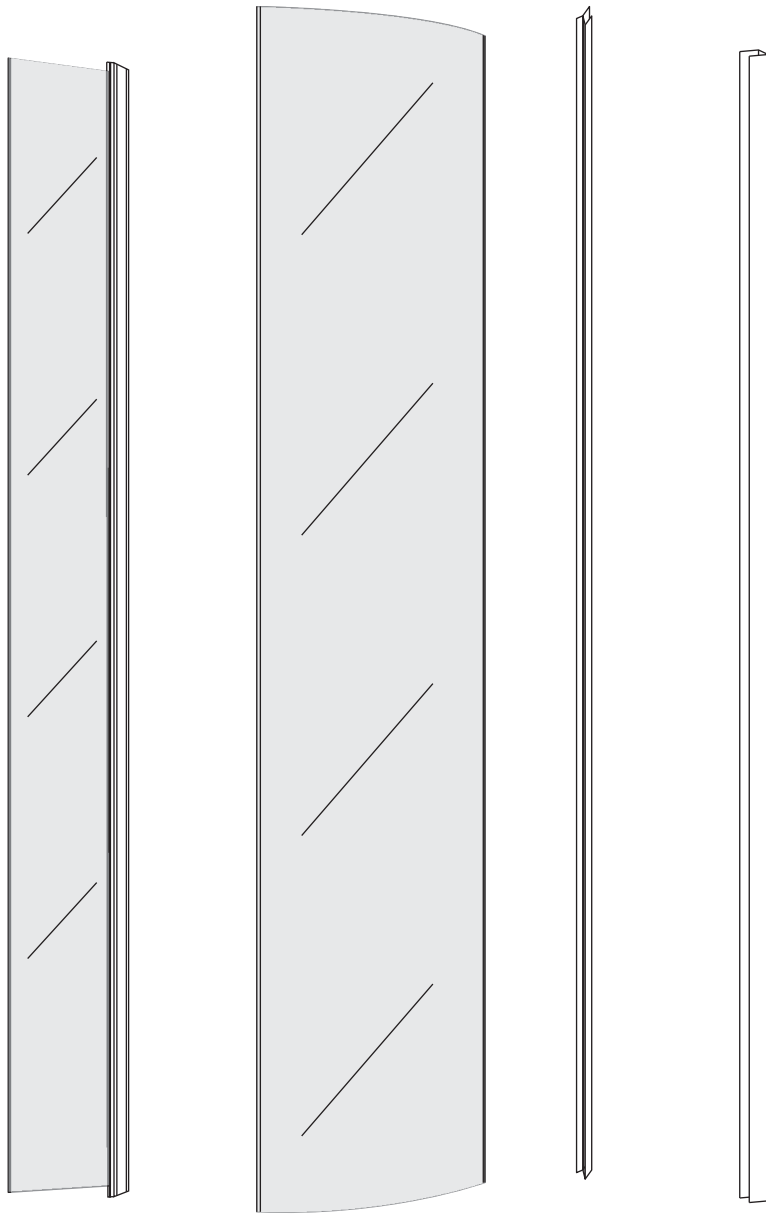


VERTICAL SEAL

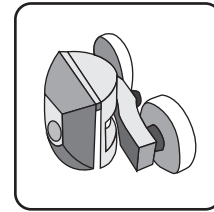


4PCS

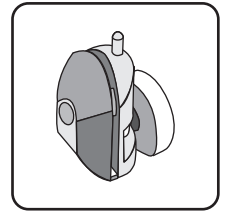


4PCS

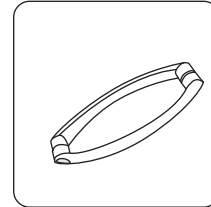


2PCS

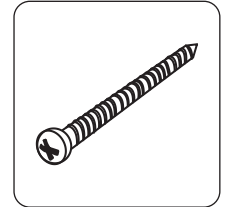


8PCS

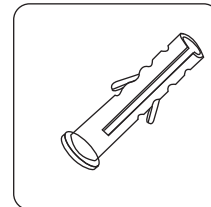


4PCS

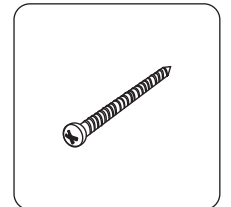


4x25mm
8PCS

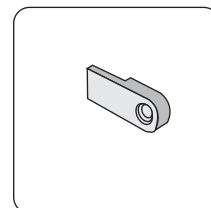


4PCS

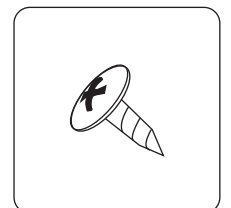



4x12mm
8PCS

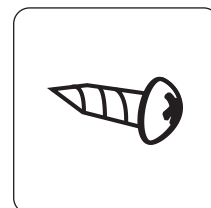

4x12mm
4PCS



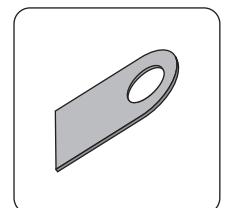


8PCS

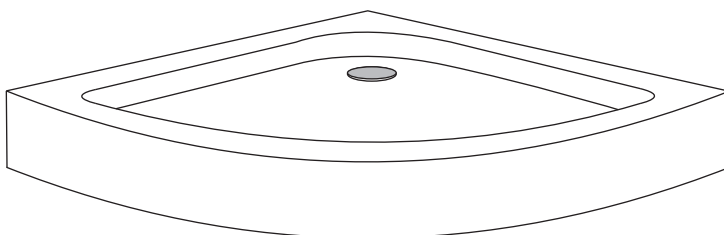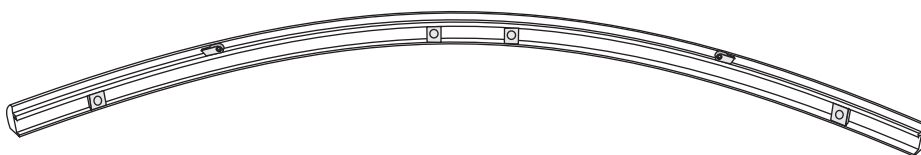







3mm

1.

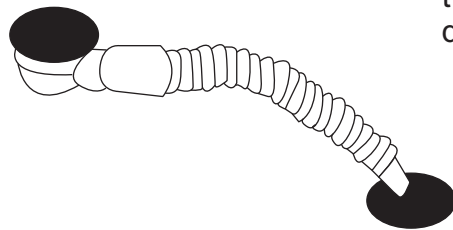
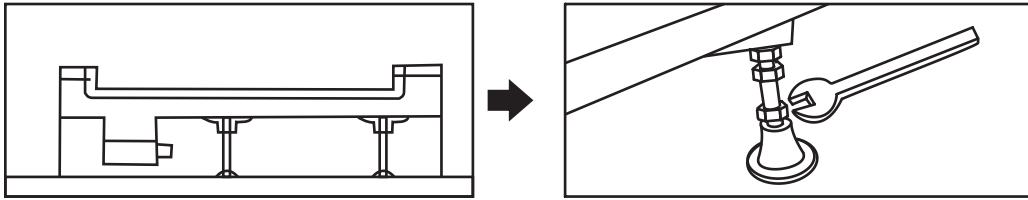
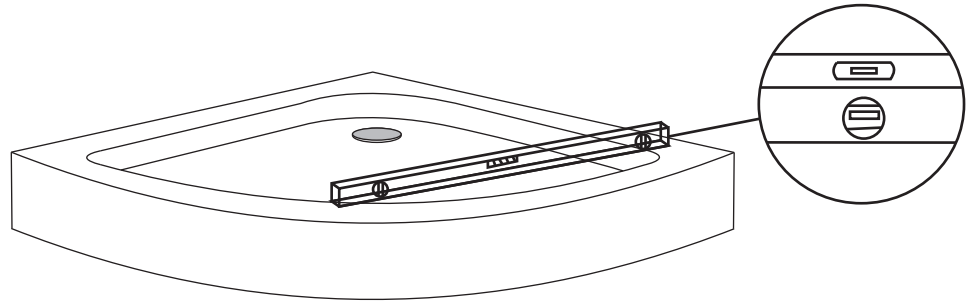


Lift the rear part of bottom basin, and then insert one end of the pipe into the drainage hole



2.

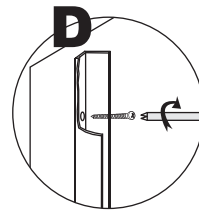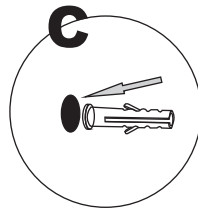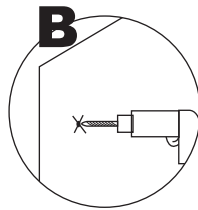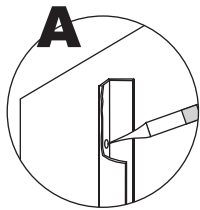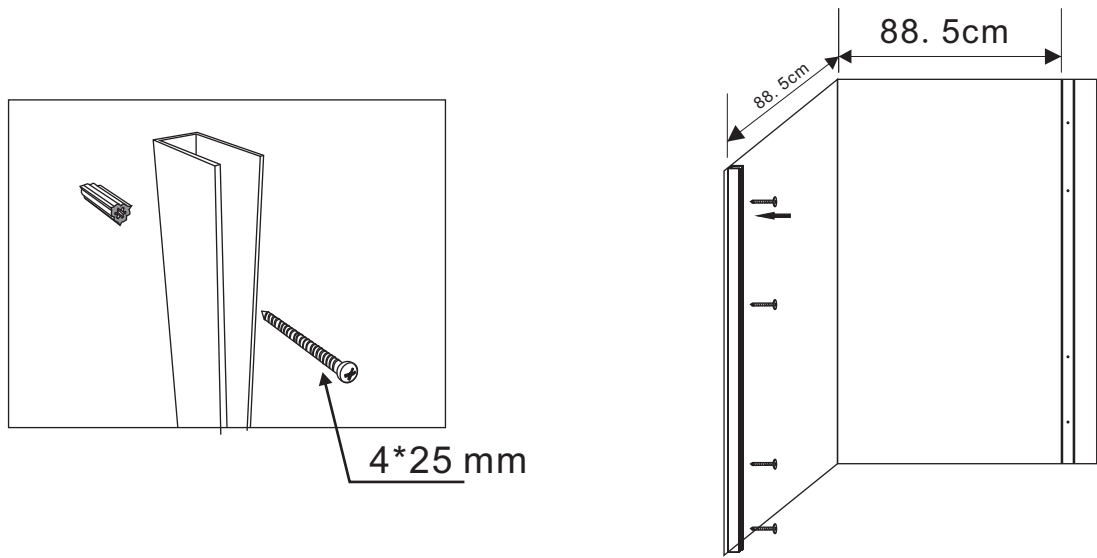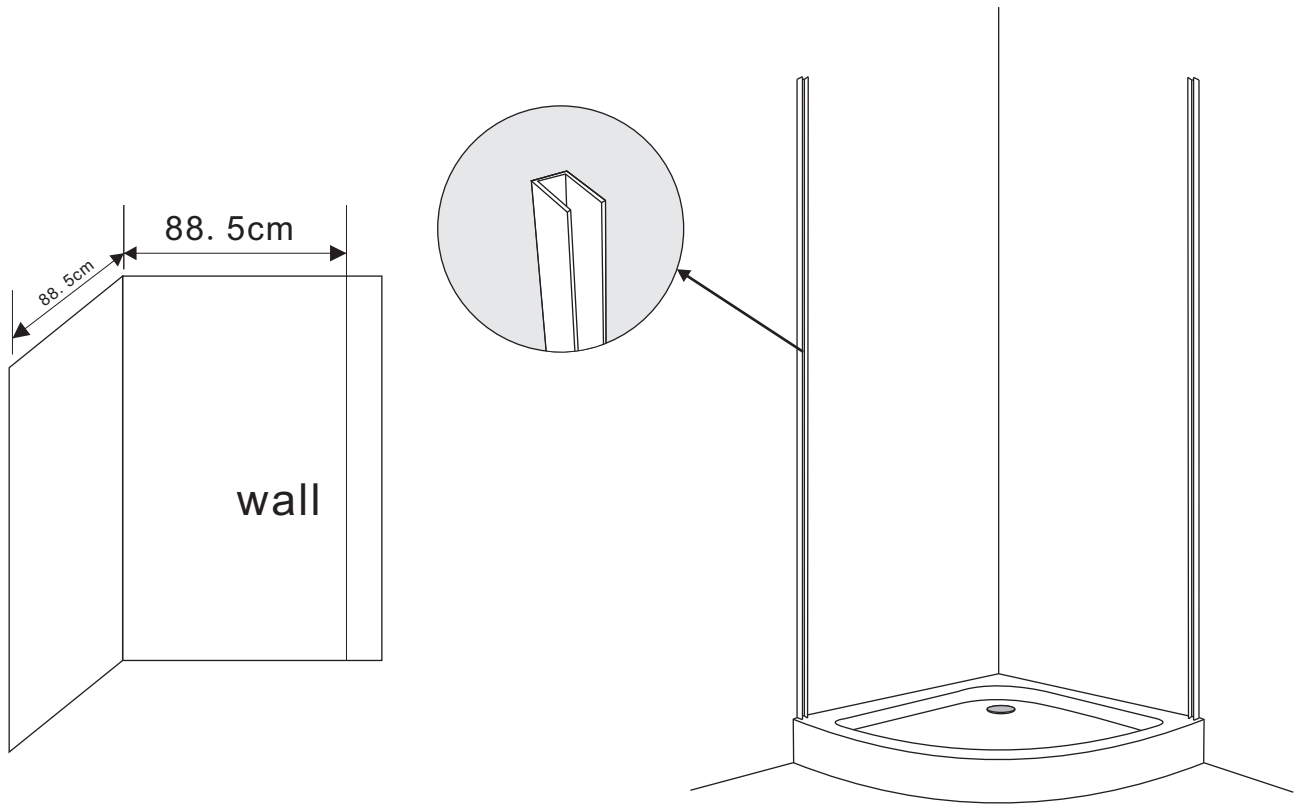




3.

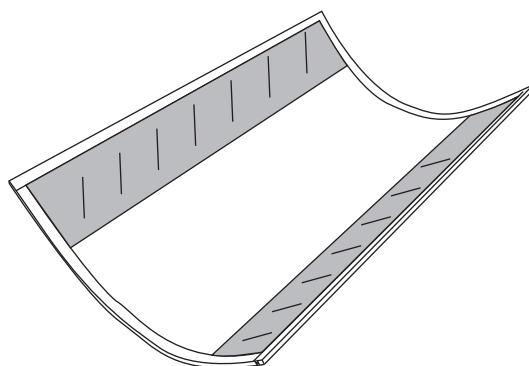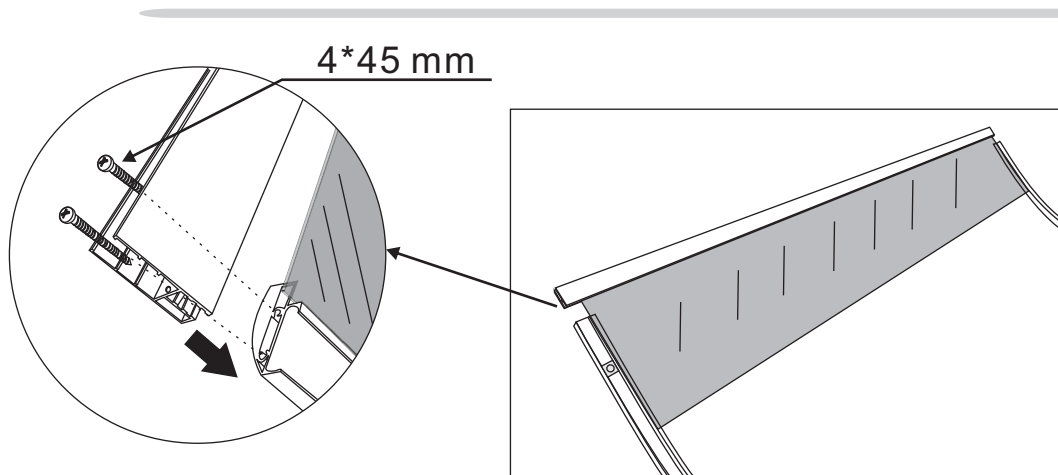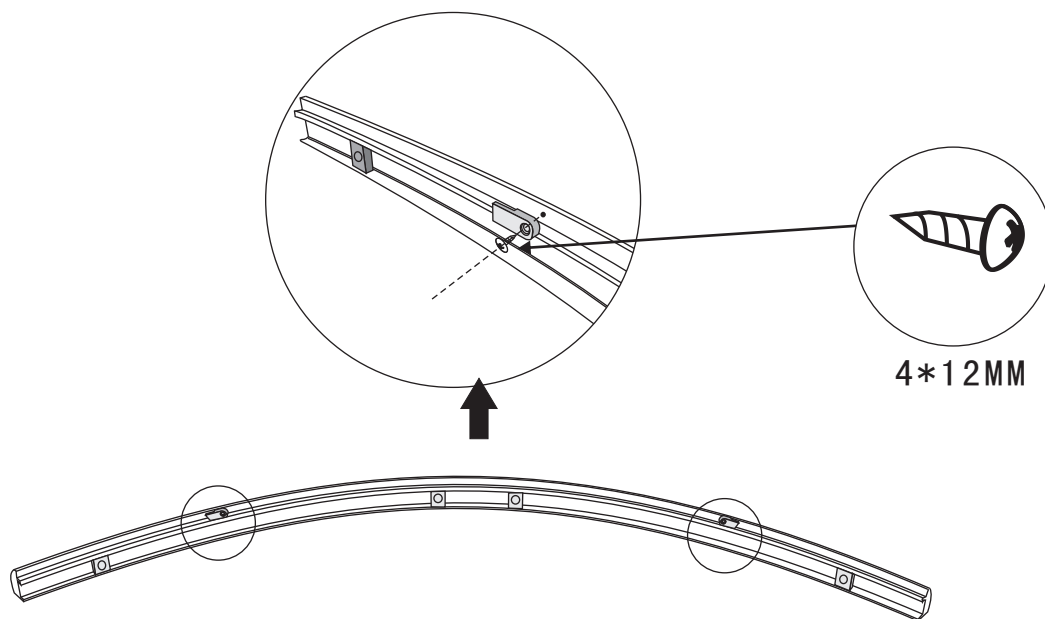





4.

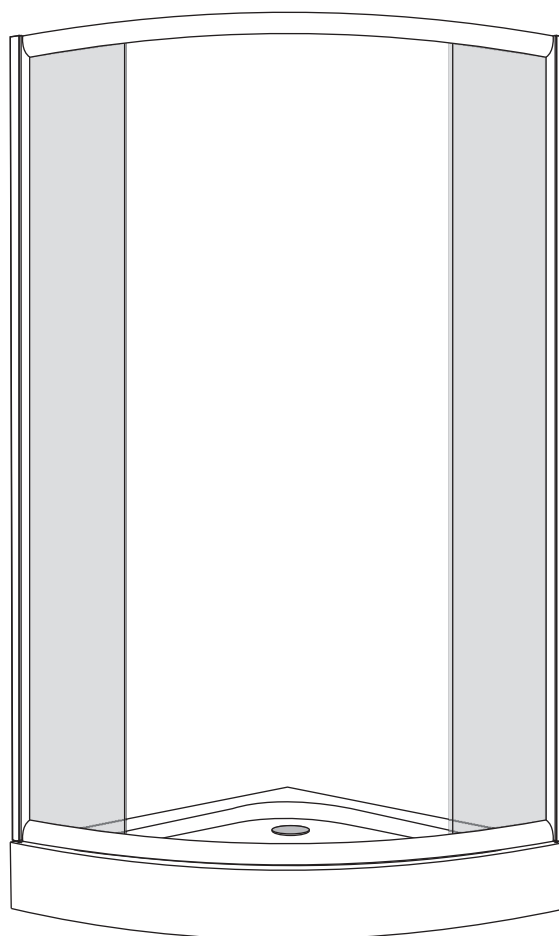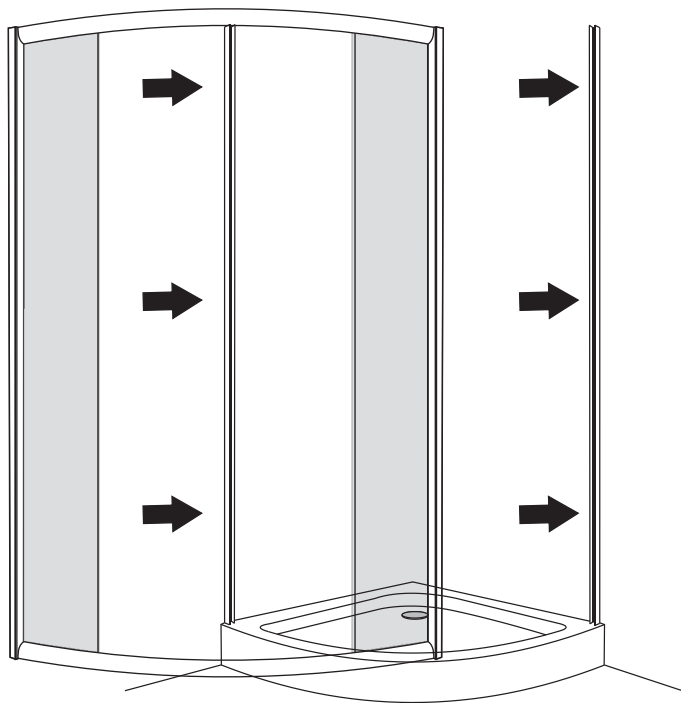


Installation Instructions

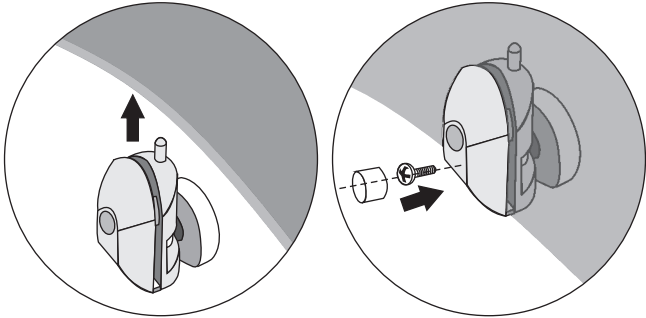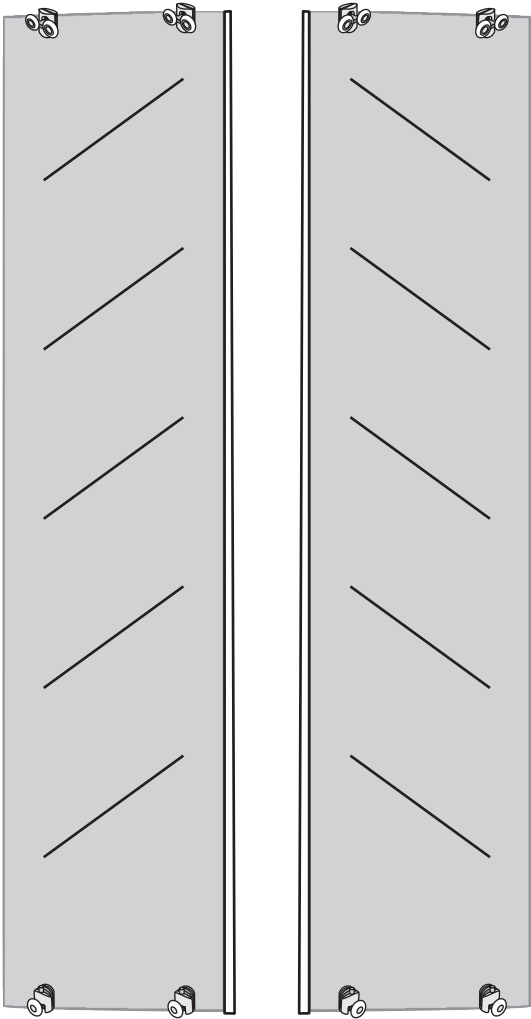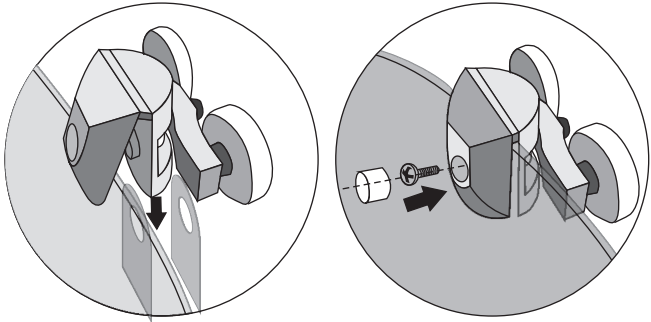




Installation Instructions

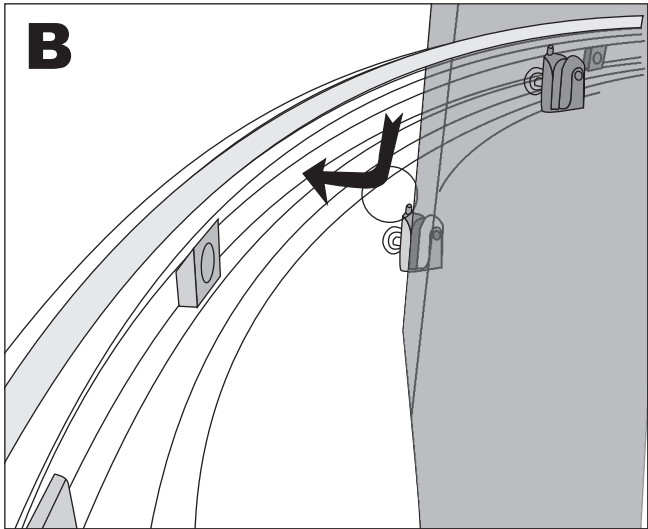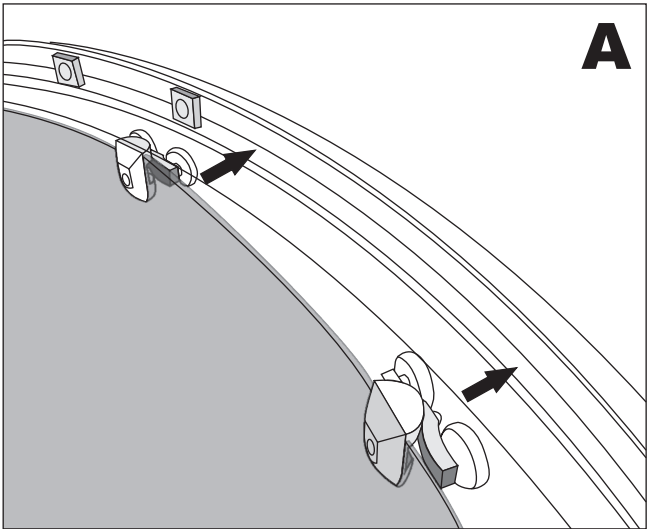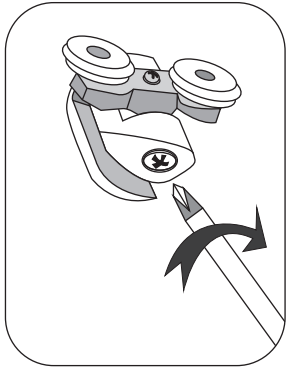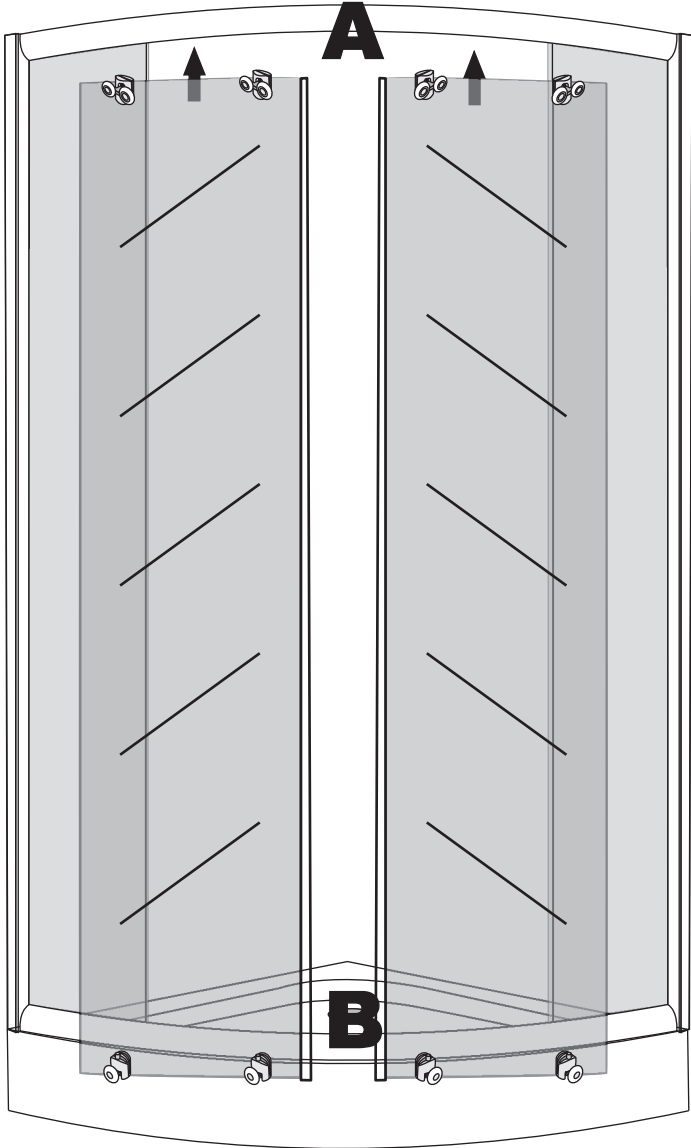

7.

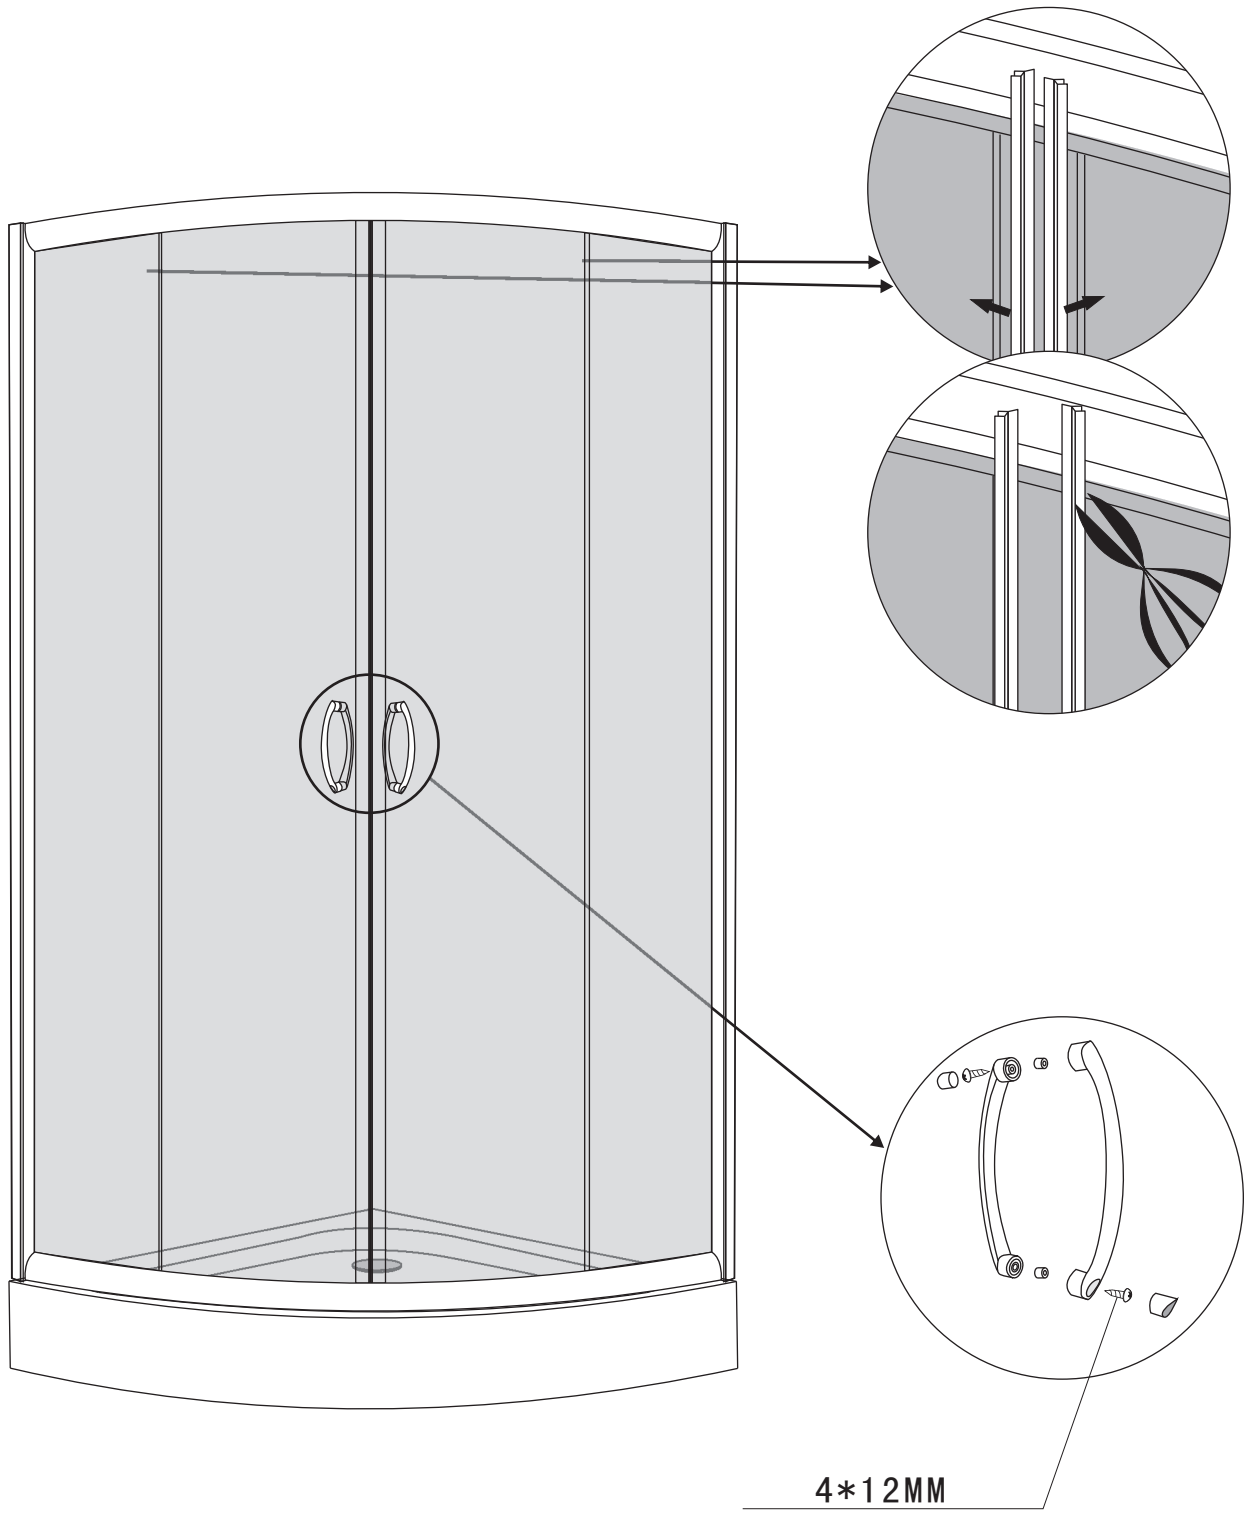

8.

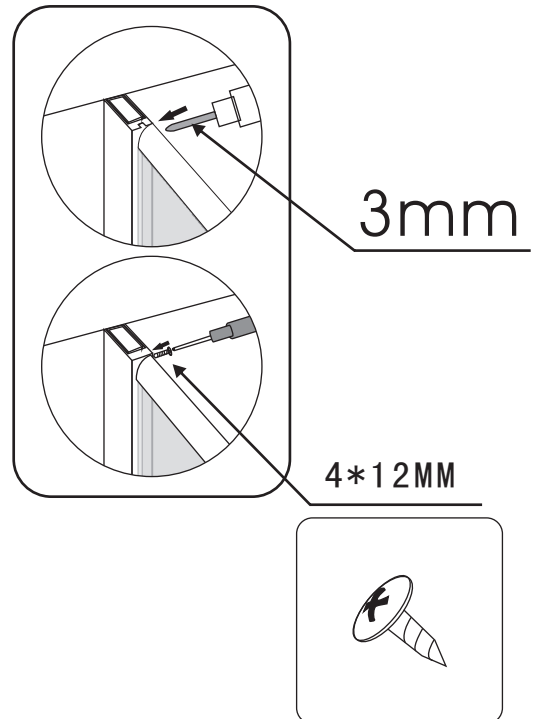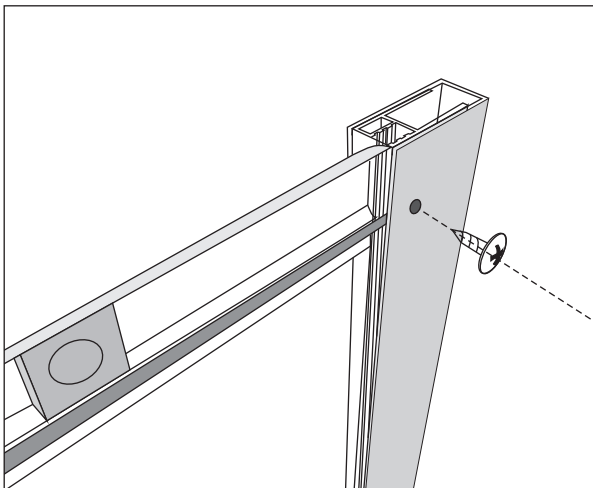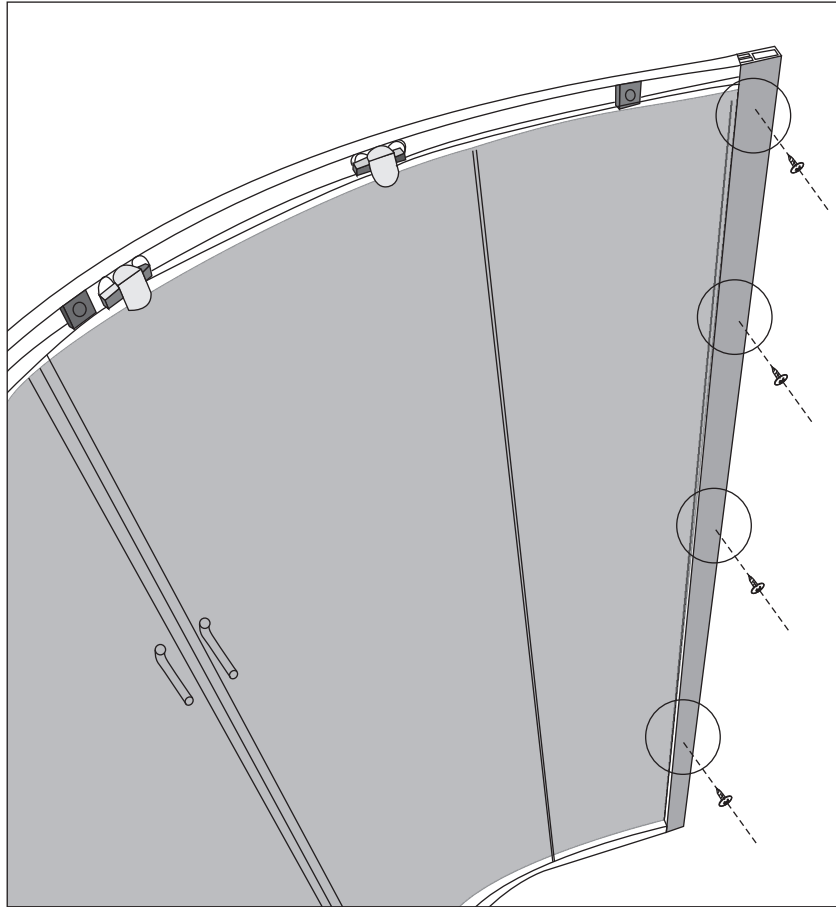

3mm

4*12MM