


Odyssey


Installation instructions

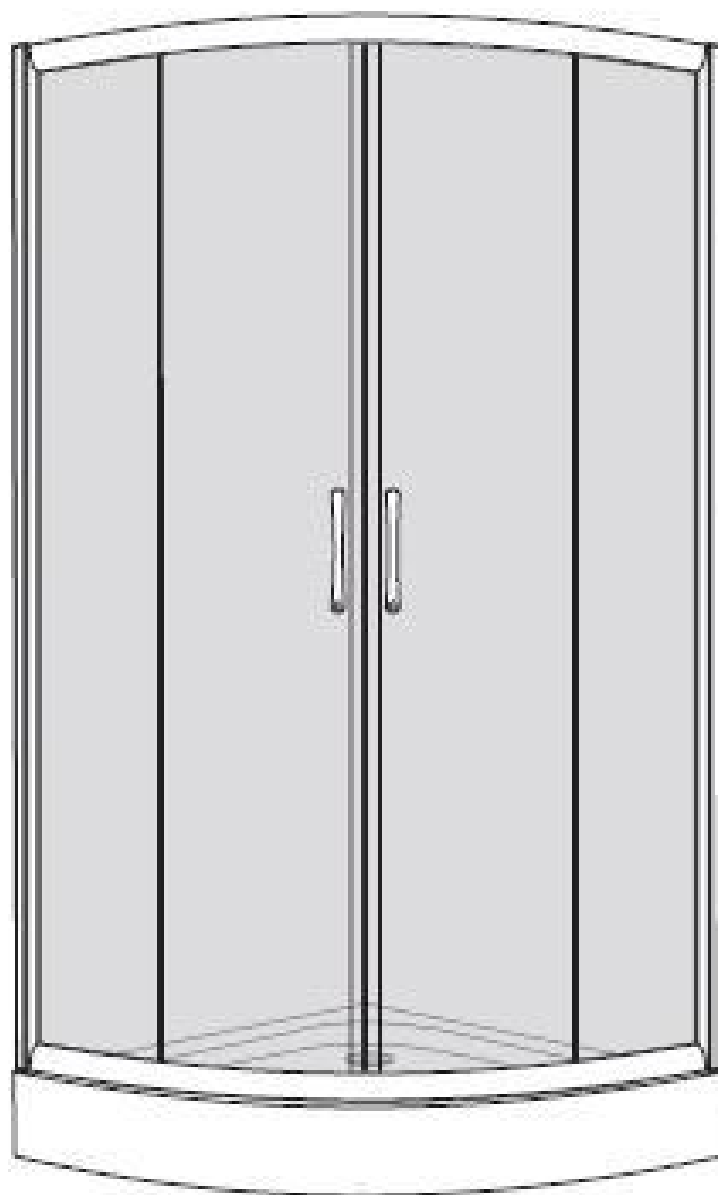

SIZE: 100x100x200 CM


Odissey

Installation Instructions

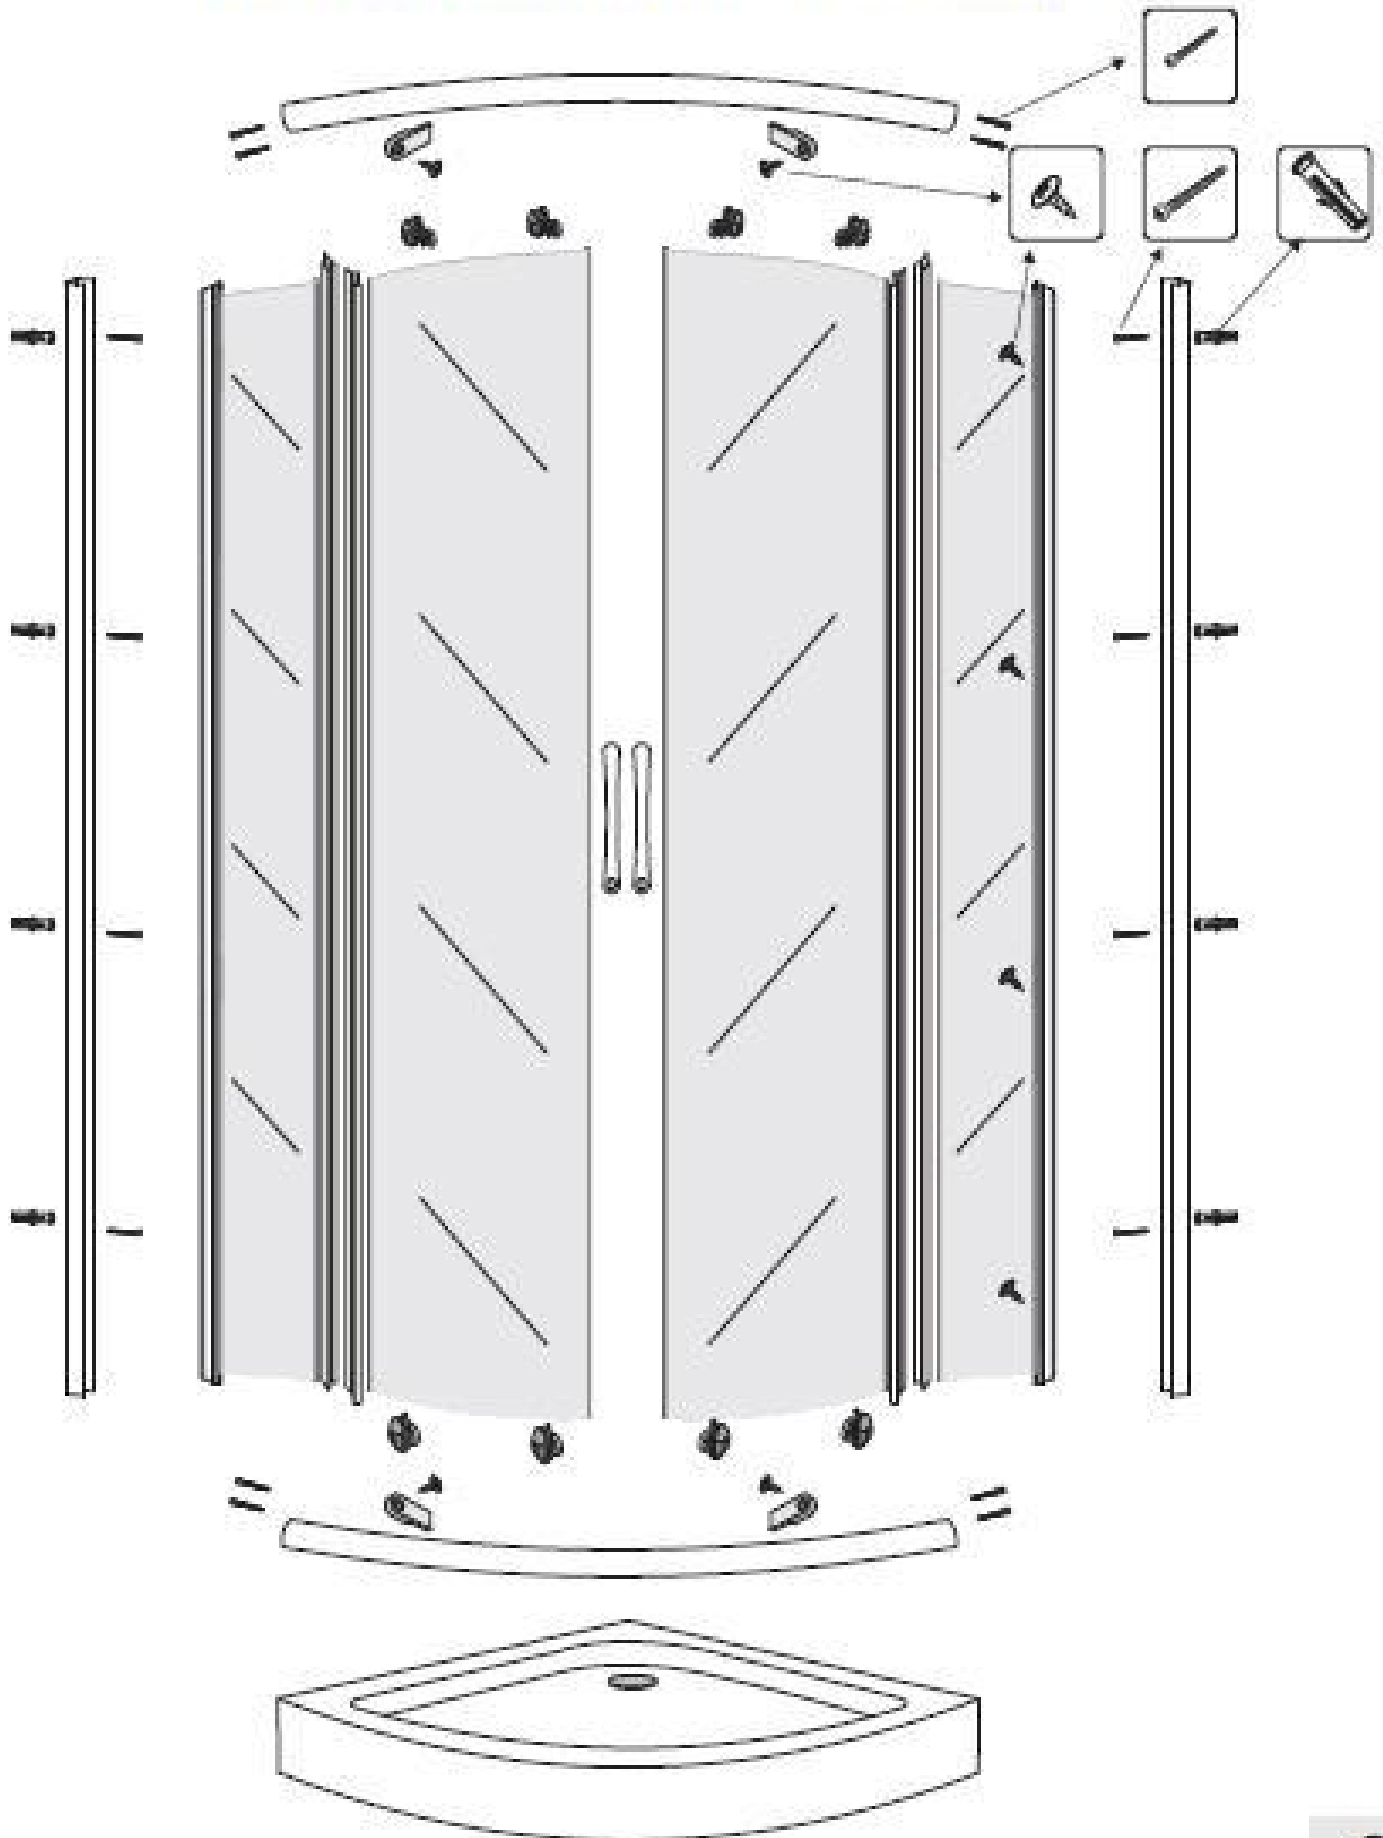


Odyssey




Installation Instructions

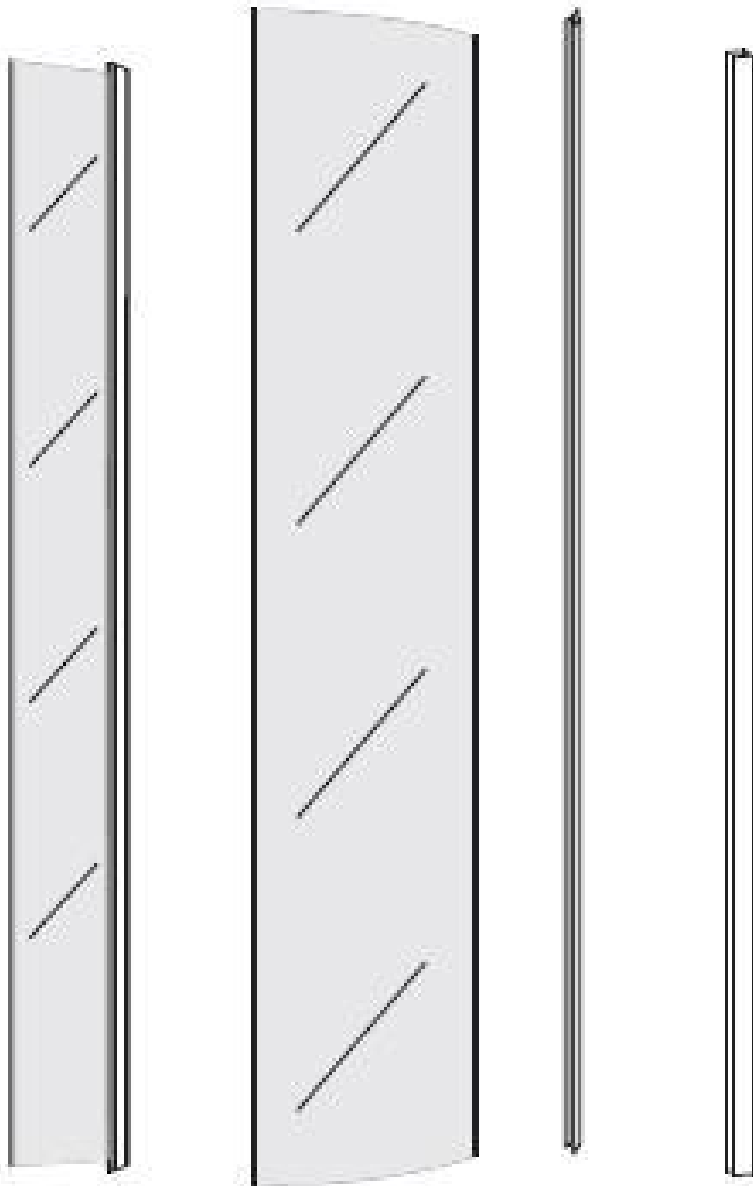

VERTICAL SEAL








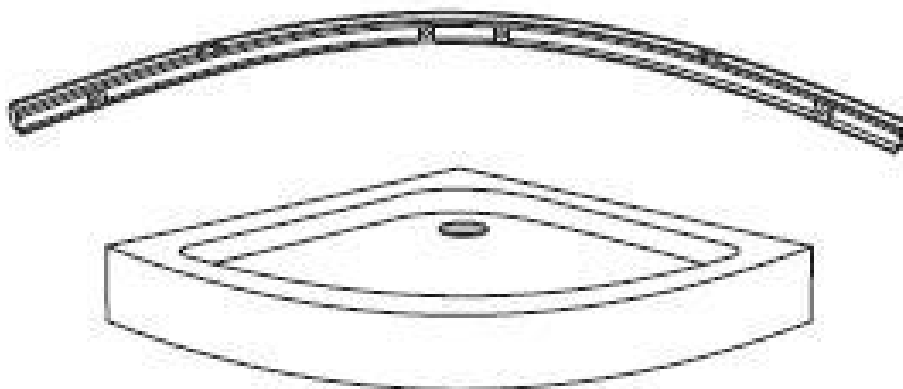


1.

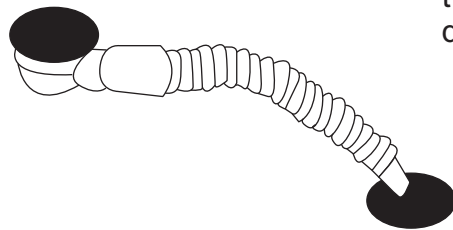
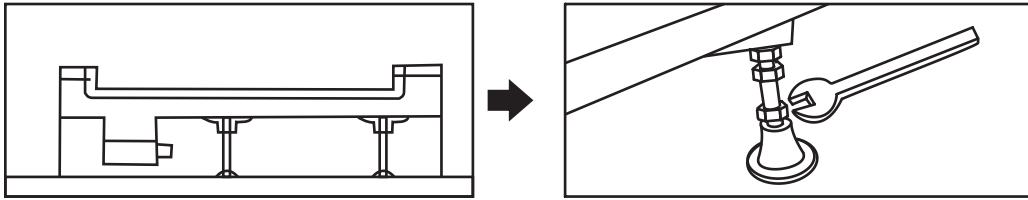
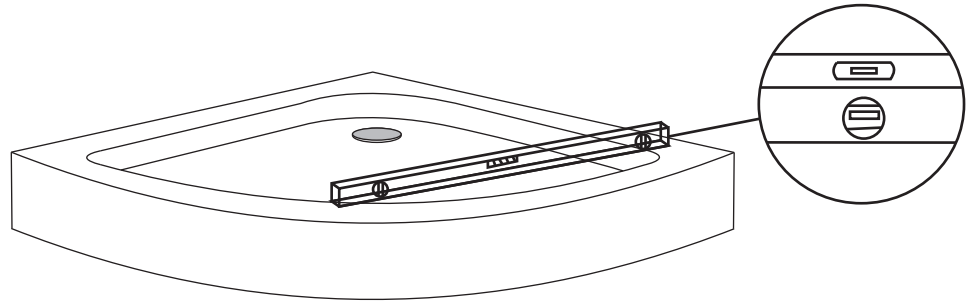


Lift the rear part of bottom basin, and then insert one end of the pipe into the drainage hole



2.

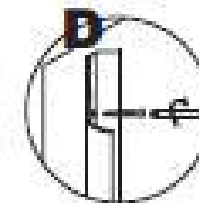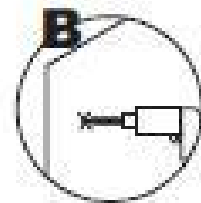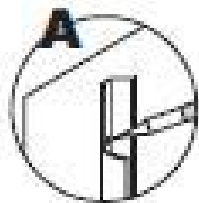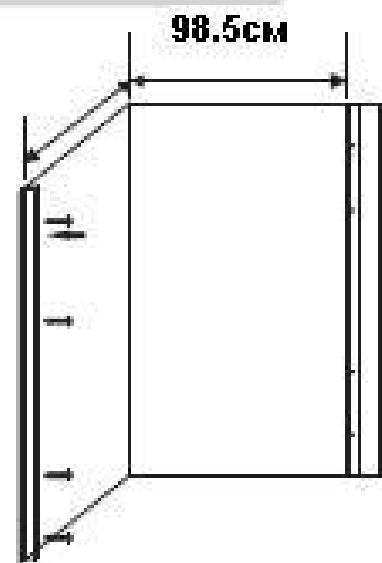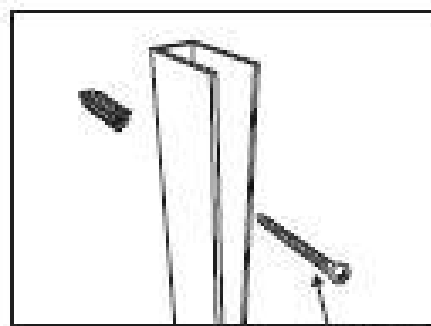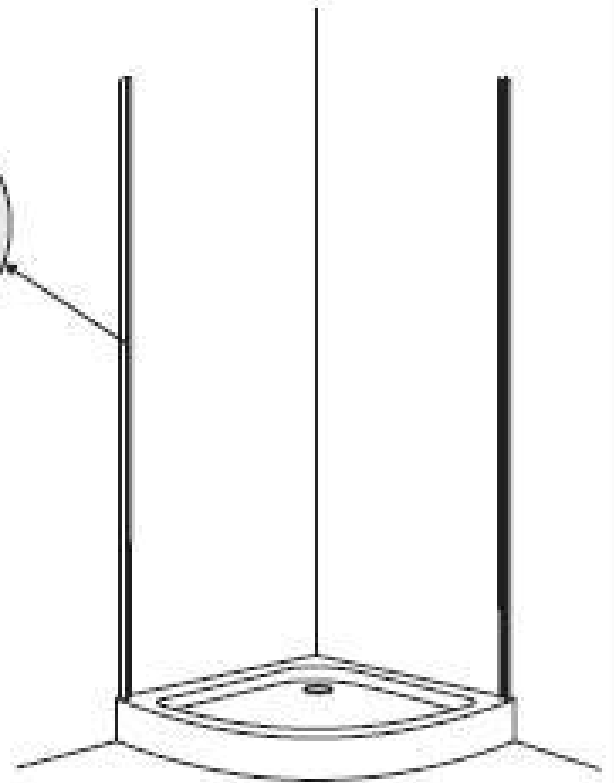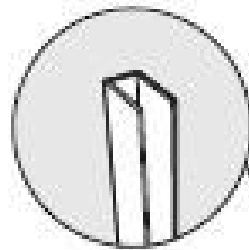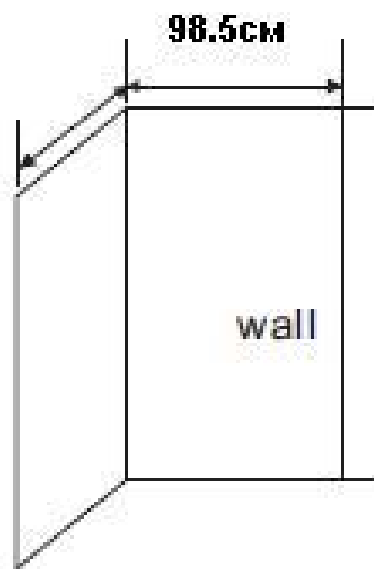




3.

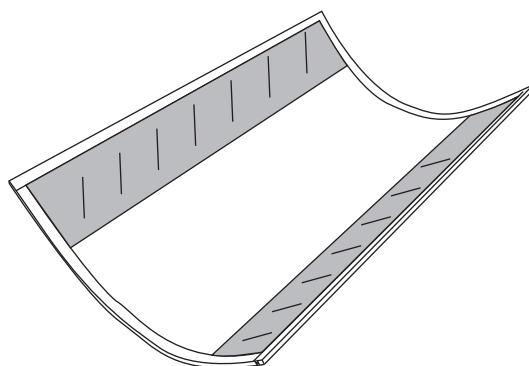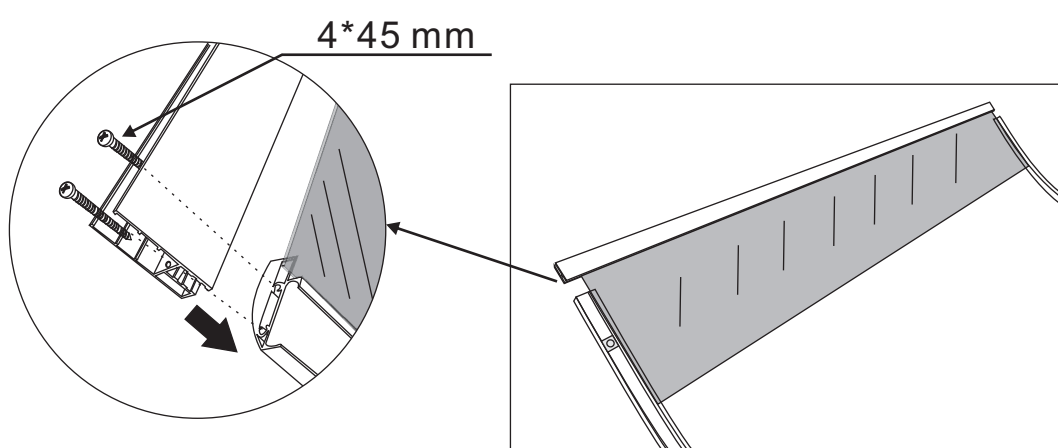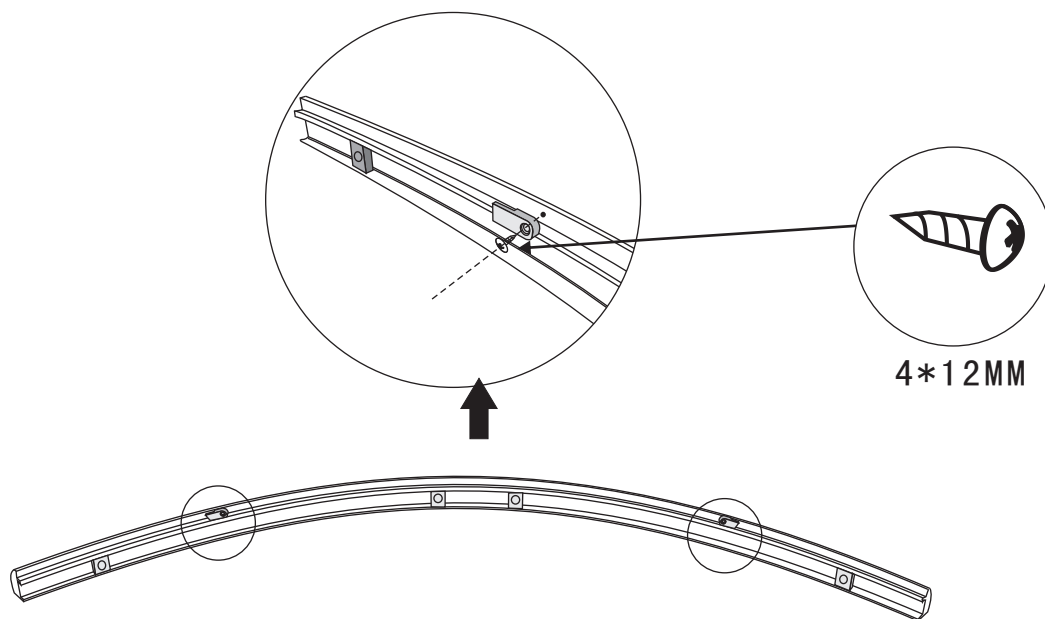





4.

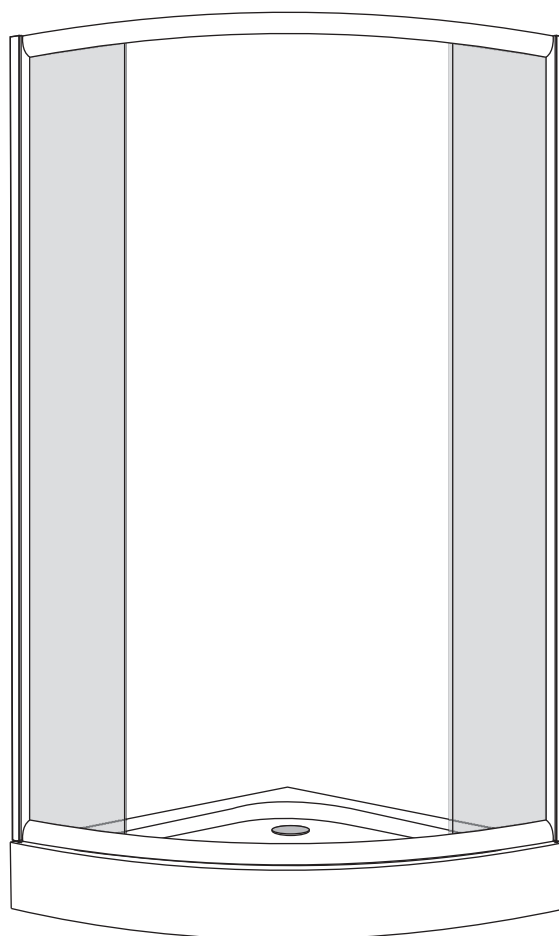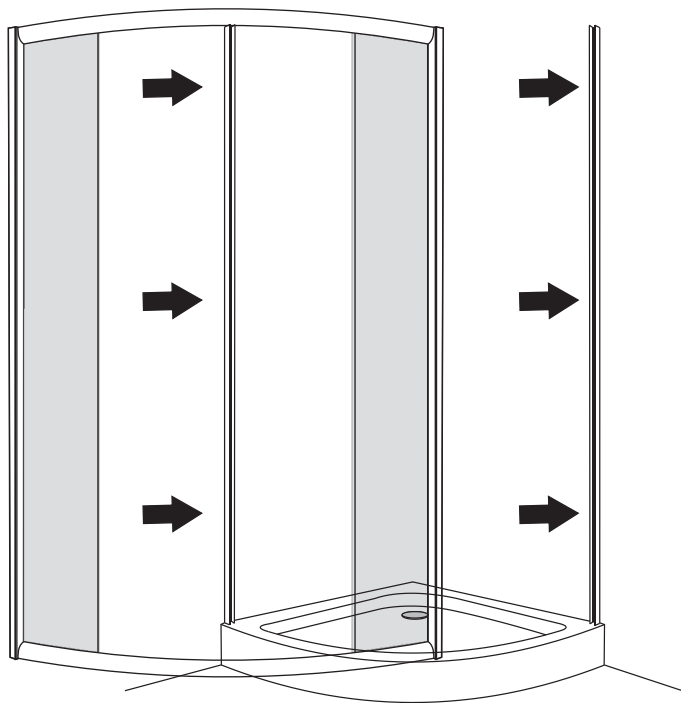


Installation Instructions

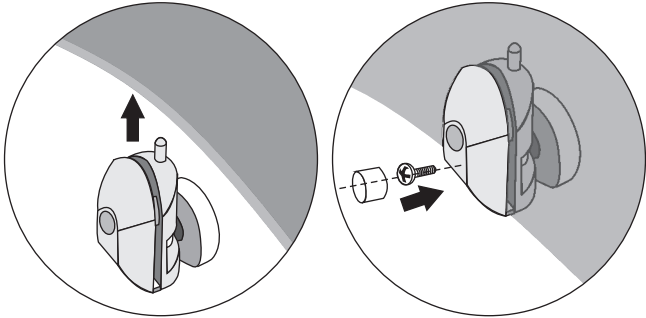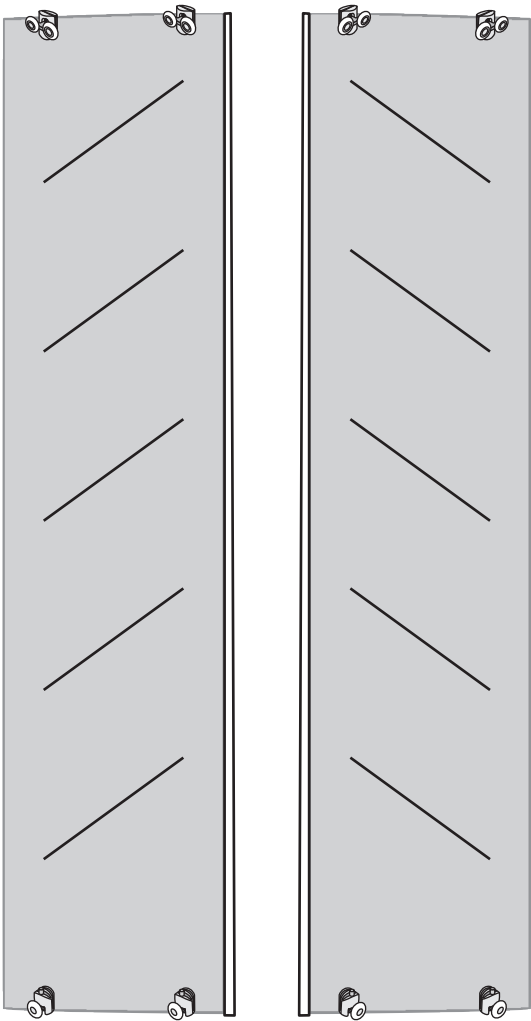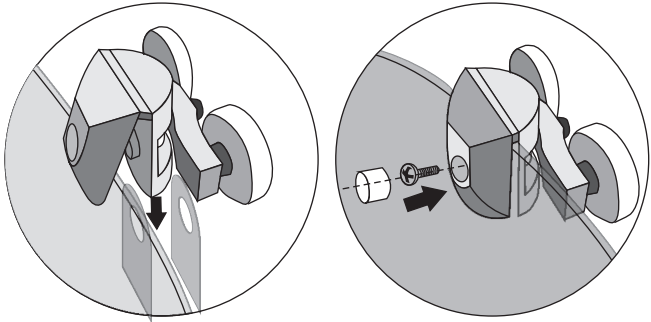

Installation Instructions

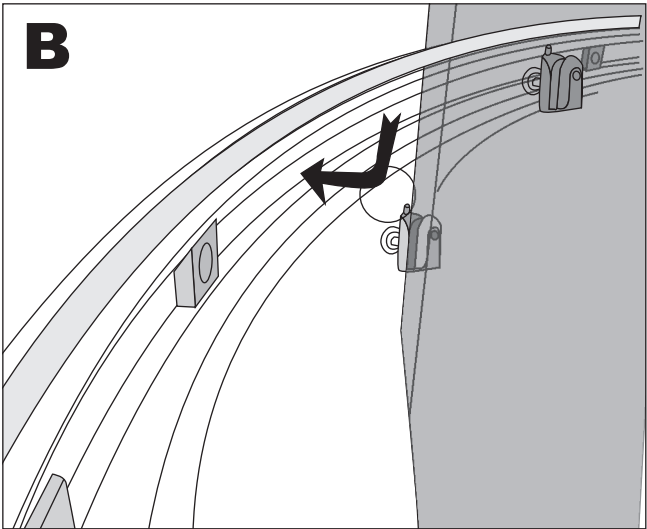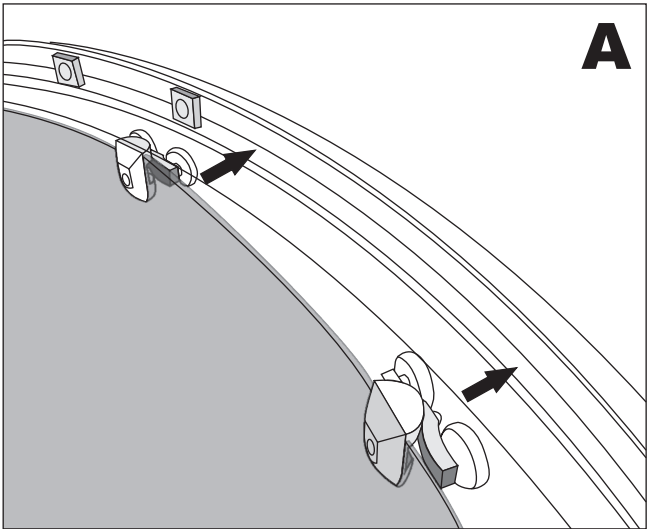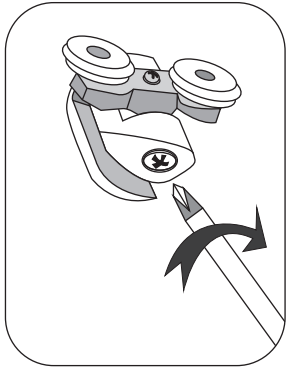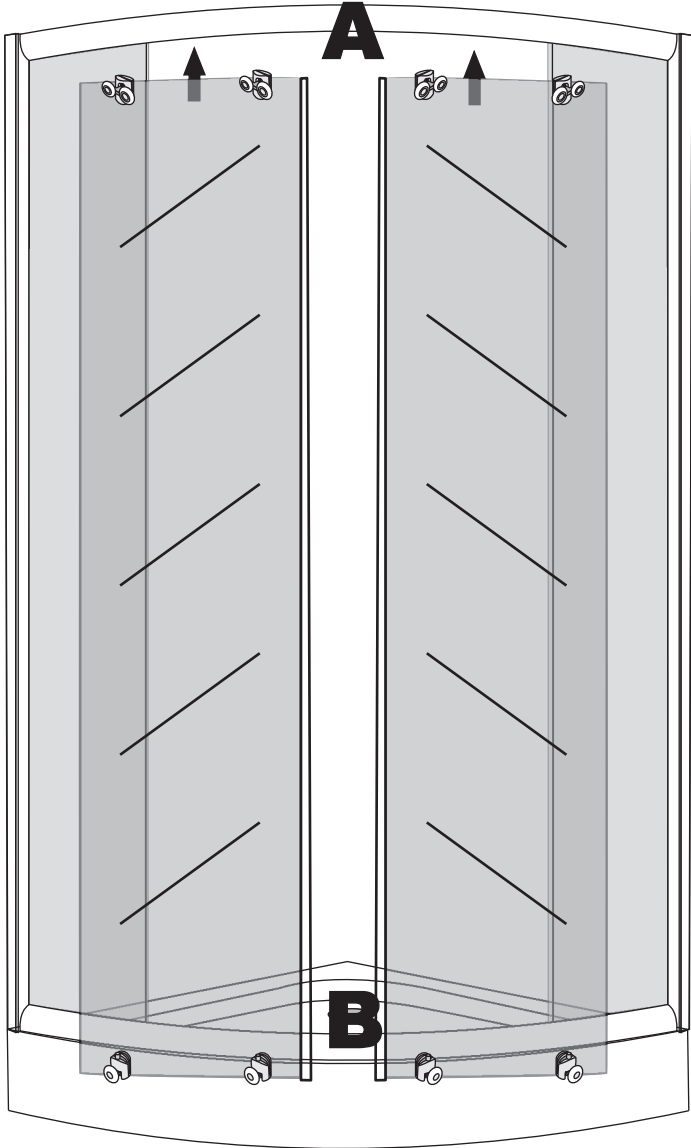

7.

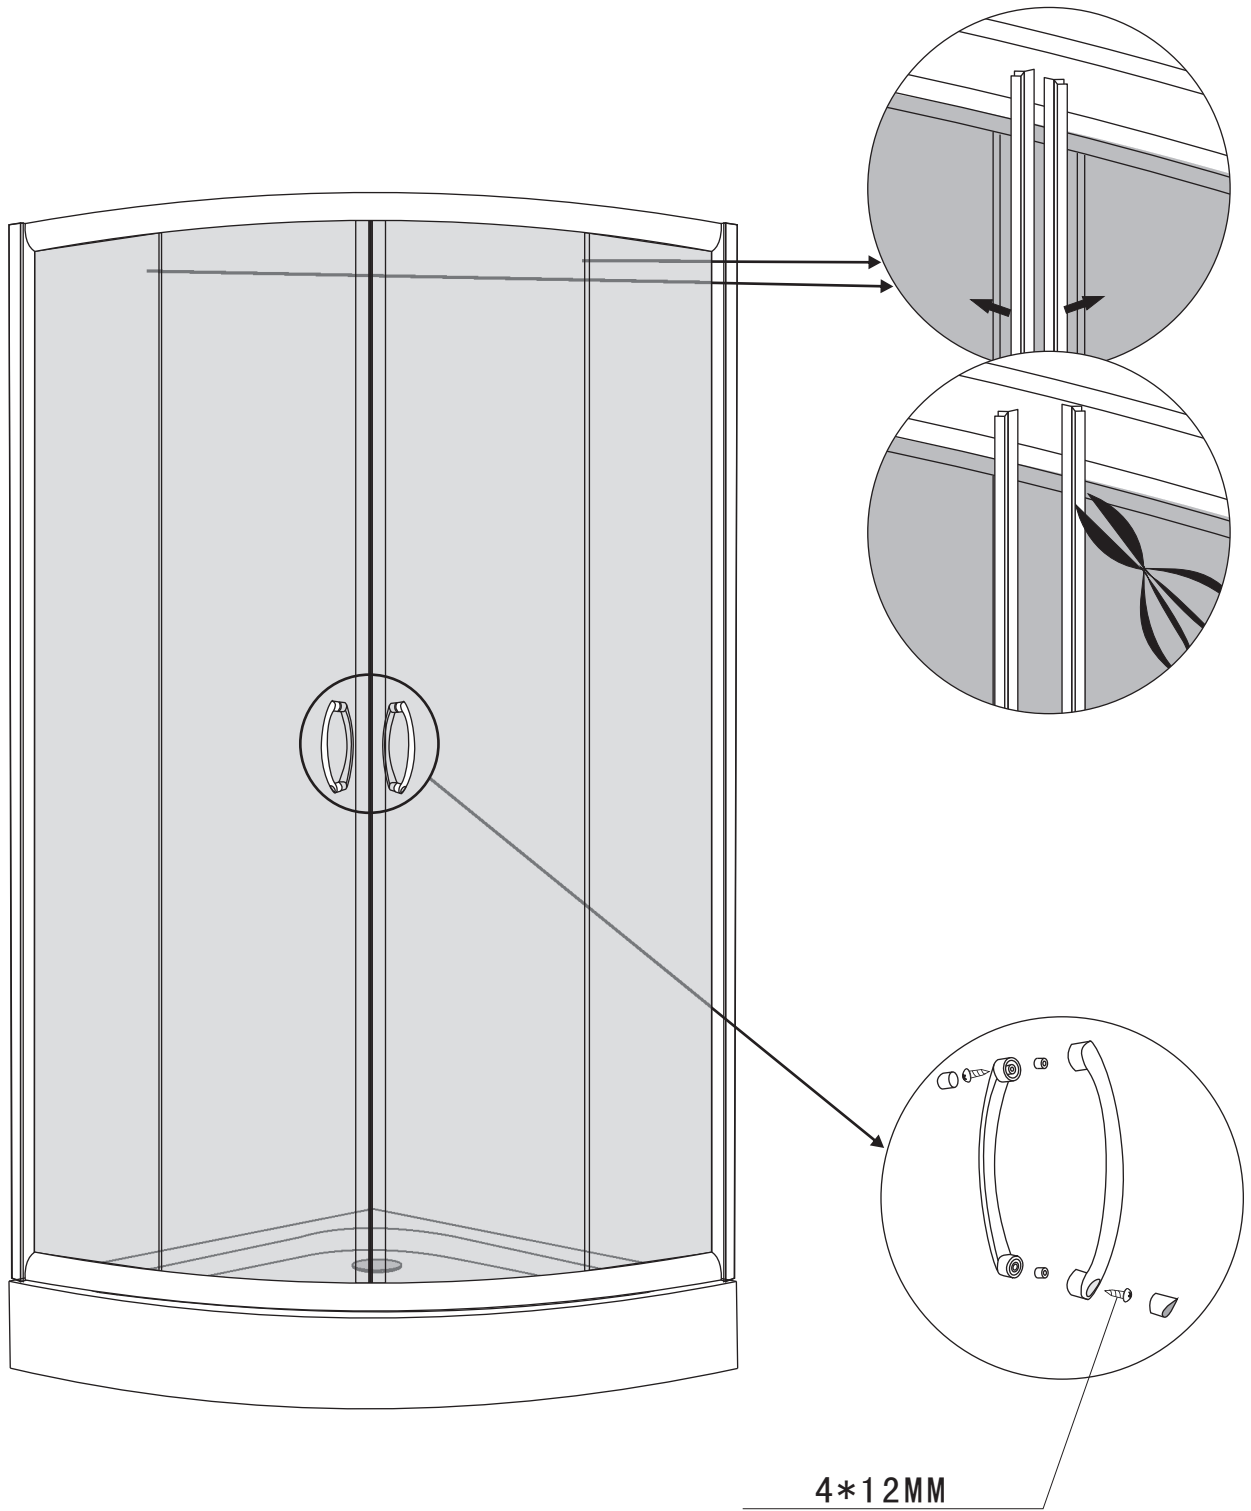

4*12MM

8.

